



Fire Station Hose Rack Model FSHR Installation, Maintenance, and Operation Manual



Marina Electrical Equipment, Inc.
100 Warwick Court
Williamsburg, VA 23185
Toll Free: 1-855-258-3939
Fax: 1-757-258-3988

**Fire Station Model FSHR
Installation, Maintenance and Operation Manual**

INTRODUCTION

PRODUCT DESCRIPTION

The "Fire Station Hose Rack" cabinet is designed to comply with NFPA 303 as a weatherproof enclosure to house a 10 or 20-pound type ABC fire extinguisher and/or 2-1/2" – 3-1/3" Fire Hose Valve & Rack.

WARNING: Disconnect power before servicing. Marina Electrical Equipment, Inc. recommends that only qualified personnel or an electrician, familiar with the operation of this power outlet equipment, should install or service this power outlet. This product must be installed in accordance with the National Electric Code (NEC) or the Canadian Standards Association (CSA) and any other applicable local codes. Before installing equipment, check with your local electrical inspector for specific requirements and information for your area.

NOTE: ELECTRICAL CONNECTIONS PER NEC 555.9 - All electrical connections shall be located at least 12 inches above the deck of a floating pier, but not below the electrical datum plane.

CAUTION: Marina Electrical Equipment, Inc. will not assume any responsibility for property damage or personal injury resulting from misuse of the information in this manual.

INSTALLATION

IMPORTANT: The "Fire Station Hose Rack" is thoroughly coated on the bottom and the mounting base plate is specially designed to protect the bottom of the pedestal from direct contact with the dock surface to inhibit the corrosive effects of treated deck board lumber and/or concrete. Please handle the cabinet with care while mounting so as not to scrape or damage the coating on the bottom, which could lead to corrosion problems.

Step 1: Mounting the "Fire Station Hose Rack":

Note: The pedestal mounting surface must be flat and level for proper mounting. Warped decking or uneven concrete surfaces can be shimmed with stainless steel washers to provide a level surface for mounting base installation.

On Wooden Docks: At each corner, fit the mounting base plate to the dock surface with one (1) 3/8" stainless steel bolt and washer for through-bolting, or (1) 3/8" stainless steel lag bolt and washer for surface mounting.

On Concrete Docks: At each corner, fit the mounting base plate to the dock surface with one (1) 3/8" stainless steel compression bolt or 3/8" stainless steel threaded rod cast in concrete on 8¼" centers.

Step 2: Connecting the Power Lines to the Terminal Block:

The "Fire Station Hose Rack" safety pedestal contains a terminal block within the top lens tray. Simply remove the five (8) screws holding the top cap, and feed the line wires through the back utility routing channel conduit up to the lens tray (see Figure A). Feed the wires through the 5/8" access hole and make the appropriate terminations on the labeled terminal block (see Figure A).

Step 3: Plumbing:

The "Fire Station Hose Rack" is designed to accommodate fire hose valve/rack assemblies up to 3-1/2" pipe risers. Mount the unit so that the riser enters the cabinet on the left side. A series of struts are incorporated on the sidewall for securing the pipe (see Figure B).

EXTERIOR MAINTENANCE:

Dirt, grime, bird droppings and insect residue can be removed by use of a mild degreasing solution mixture of one teaspoon per gallon of warm water. Gently scrub the housing exterior and rinse clean. Spiders and other insects can be controlled by use of a **WATER-BASED** insect spray.

WARNING: DO NOT use any petroleum or solvent-based insect spray or corrosion inhibiting products on any part of the power pedestal. These solvents will compromise the structural integrity of the polycarbonate material and cause stress cracking and material failure. Use of any such solvents will void the manufacturer's warranty.

INTERIOR MAINTENANCE:

WARNING: Turn off or disconnect the power supplying this equipment before beginning work. This might require you to contact your local utility to disconnect the power to an existing panel board or disconnect. The line side of the main breaker in a panel board is energized unless power is disconnected upstream. Marina Electrical Equipment, Inc. will not assume any responsibility for property damage or personal injury resulting from misuse of the information in this manual.

1. Annual Test:

Annually, test the alarm/strobe device for proper functionality. Simply open the extinguisher access door and lift the life ring off of its bracket. Both of these actions should trip the alarm/strobe device. Replace defective parts as necessary.

2. Check Fire Extinguisher Charge:

Monthly, check the extinguisher charge to see that it is full. Replace as necessary.

3. Annual Light Fixture Maintenance:



The light fixture can be tested by covering the photocell window for 2-4 minutes to simulate darkness. The photocell should then close the circuit to illuminate the bulb. Should the bulb not illuminate, unscrew the four (10) screws fastening the top to remove the top and expose the lamp holder. Disconnect the fuse and replace the bulb. Replace fuse and top (see Figure A).

MOUNTING FOOTPRINT



120V TERMINAL BLOCK IN TOP

WIRING

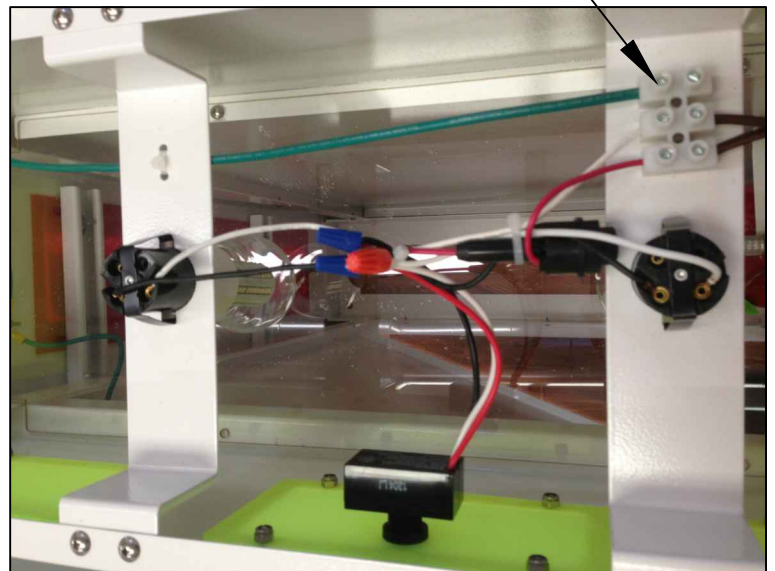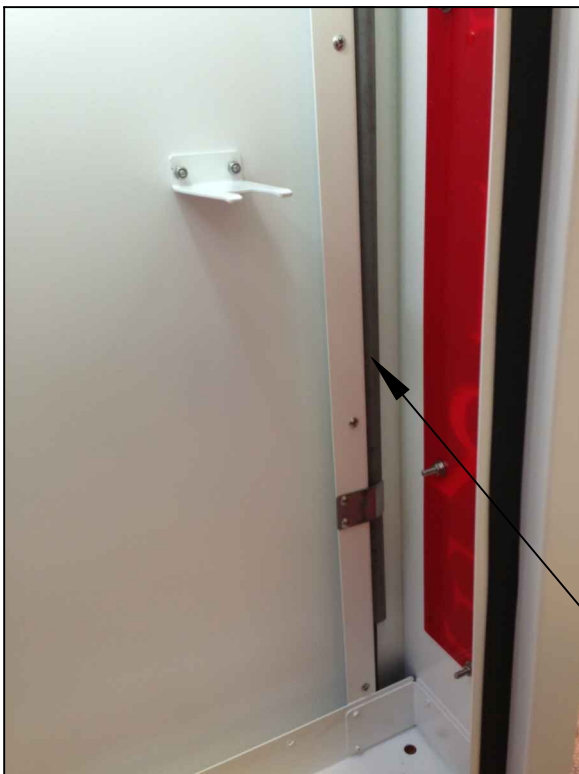

.5" CONDUIT FOR 120V WIRE ENTRY



MARINA ELECTRICAL EQUIPMENT, INC.
100 WARWICK COURT
WILLIAMSBURG, VA 23185
PHONE: 1-855-258-3939
FAX: 1-757-258-3988

FIRE STATION HOSE RACK
FIGURE A:
MOUNTING AND WIRING

STRUTS FOR SECURING PIPE RISER

PIPE RISER AREA



MARINA ELECTRICAL EQUIPMENT, INC.
100 WARWICK COURT
WILLIAMSBURG, VA 23185

PHONE: 1-855-258-3939
FAX: 1-757-258-3988

FIRE STATION HOSE RACK
FIGURE B:
PLUMBING

WARRANTY POLICY

Housings:

Marina Electrical Equipment, Inc. (MEE) warrants that the "Fire Station Hose Rack" main housing and attached parts (top, lens, doors, and mounting base plate) will be free from failure resulting from defects in material and/or workmanship, and are covered by a limited warranty of seven (7) years. Should any of the above parts fail to comply with the above-mentioned warranty, MEE will either repair or replace the defective part(s), or credit the purchaser for the purchase price of the part. This warranty is voided if any petroleum-based solvent is used anywhere on or near any of the polycarbonate parts. These parts include: interior lens tray and exterior lens.

Internal Components:

MEE warrants that all internal electrical components shall be covered by the same warranty offered by the component manufacturer. Items covered include: fire extinguishers, life rings, photocells, lamp holders, switches, fire hose valve/rack assemblies, alarm/strobe devices, fuses and wiring harnesses. Should any of the above parts fail to comply with this warranty policy, MEE will coordinate the repair or replacement of the defective part(s) with the respective supplier.

This warranty policy does not cover damage or failure resulting from abuse, misuse, negligence or Force Majeure. All warranty claims must be made in writing and all defective products shall be returned to MEE for evaluation unless stated otherwise by MEE. MEE will not be responsible for reimbursing the purchaser for any sort of expense incurred by the purchaser as a result of the repair or replacement of a warranty claim.

Send all warranty claims to:

Marina Electrical Equipment, Inc.
100 Warwick Court
Williamsburg, VA 23185

Toll Free: 1-855-258-3939
Fax: 757-258-3988